
UNITE® 10 Webcam



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 500
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
videotechsupport@clearone.com

Notices

© 2022 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0127-001 V1.0, January 2022

Compliance

Details about compliance for the UNITE® 10 Webcam are available online on ClearOne’s website (www.clearone.com) in the Resource Library.

Important Safety Information

Before you set up the camera, read this manual carefully. Follow the setup instructions indicated in this manual.

Keep this manual for future use.

To prevent electric shock, do not remove screws or the camera housing. No self-serviceable parts are inside the housing.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE - NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Product Features

Video

- Format: MJPEG, YUY2
- 5 Megapixels, Full HD 1080p30 resolution
- Autofocus

USB 2.0

- 4.9 ft. (1.5 m) USB 2.0 cable attached to webcam

Audio

- Built-in digital microphone

Platform Support

- Windows XP/Vista/7/10, Android TV, Mac OS

Main Parts of Camera



Care and Maintenance

1. Connect the USB

Connect USB cable to Laptop or PC port.

2. Driver installation

Driver will automatically install, with status shown at lower right of screen.

Once installed, prompt will show camera as ready to use.

3. Troubleshooting

a. No display

- Check that driver is properly installed through your computer's Device Manager menu

b.Device is not detected

- Verify the USB connection between device and PC
- Disconnect and reconnect USB device to PC or try another USB port

Packing List



Camera



Quick-Start Guide x 1

Carefully inspect the shipment. If the shipment shows obvious signs of damage, retain the box and packing material for inspection by the carrier. Contact the carrier immediately.

ClearOne is not responsible for product damage incurred during shipment.

Dimensions

